


1.

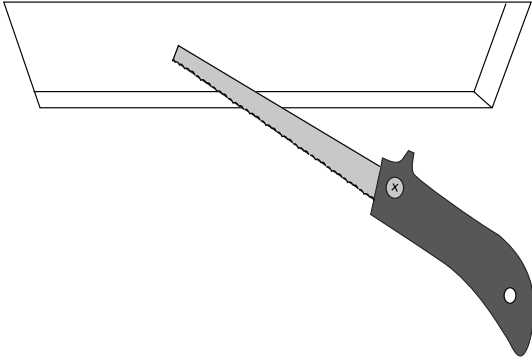


Cut hole in plaster to required cutout size:

HOW TO INSTALL MONDO TRIMLESS

CUTOUT SIZES:


Please refer to cutout sizes on specification product pages.

2.

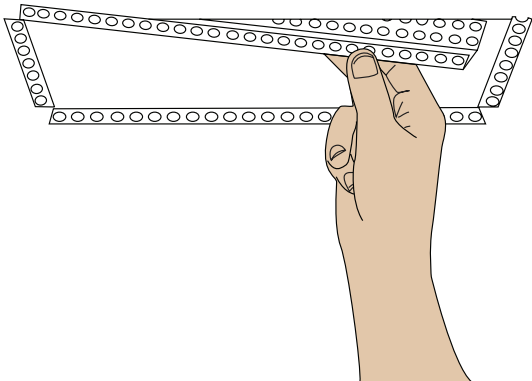


Fit 10mm plaster edging to hole. Plasterer and Painter to finish edges.

3.

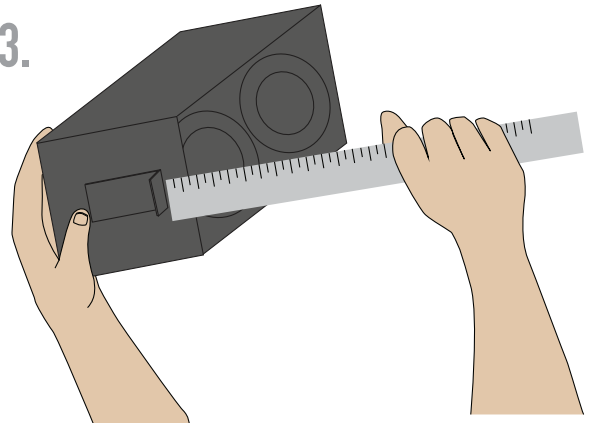


Adjust side brackets to suit thickness of plasterboard.

2.

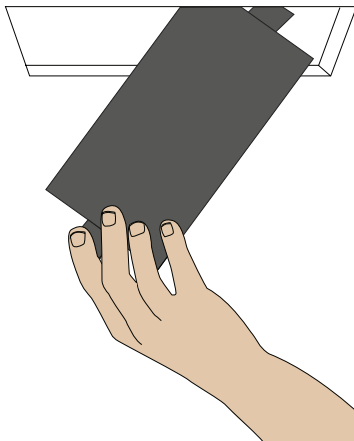

Connect transformer(s) to the Mondo fitting and connect to the supply. With the transformers placed into the hole, push the Mondo side ways through the hole.

3.

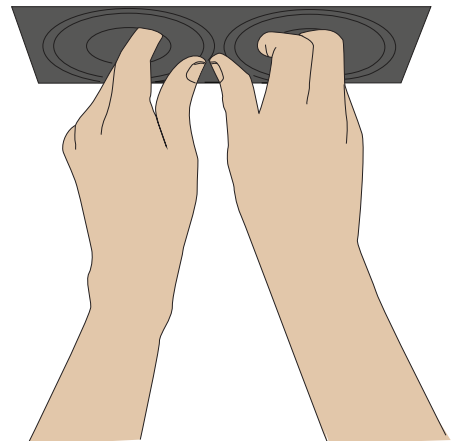

Rotate the Mondo fitting with the lamp(s) holder(s) facing downwards. Pull the fitting gently down into place. Install lamp provided for the fitting.